

Winnerwell® Flat Firepit

Instruction Manual — Sizes S / M / L / XL

Product Specifications

Size	SKU	Material	Stowed Dimension	Assembly Dimension	Net Weight	Load Bearing
S	910244	AISI304 Stainless Steel	265 x 196 x 30 mm 10.4 x 7.7 x 1.2 in	218 x 218 x 120 mm 8.6 x 8.6 x 4.7 in	~1.2 kg / 2.6 lb	8 kg / 17.6 lb
M	910233	AISI304 Stainless Steel	500 x 260 x 30 mm 19.7 x 10.2 x 1.2 in	328 x 328 x 195 mm 12.9 x 12.9 x 7.7 in	~2.5 kg / 5.5 lb	8 kg / 17.6 lb
L	910236	AISI304 Stainless Steel	657 x 348 x 30 mm 25.9 x 13.7 x 1.2 in	418 x 418 x 226 mm 16.5 x 16.5 x 8.9 in	~4.1 kg / 9 lb	10 kg / 22 lb
XL	910246	AISI304 Stainless Steel	910 x 495 x 40 mm 35.8 x 19.5 x 1.6 in	578 x 578 x 312 mm 22.8 x 22.8 x 12.3 in	~8.26 kg / 18.21 lb	15 kg / 33 lb

Contains: 1 x Flat Firepit (selected size).

Assembly Instructions

1. Check before assembly

Check that there are no missing, damaged or abnormal parts. Verify both the firepit body and the base stand before you begin.




2. Unfold the base stand

Unfold the base stand fully so its legs are extended and ready to receive the firepit body.



3. Unfold the body of the firepit and finish the assembly

Unfold the body of the firepit. Insert the retaining lugs of the base stand into the reserved holes of the body to lock the two parts together.

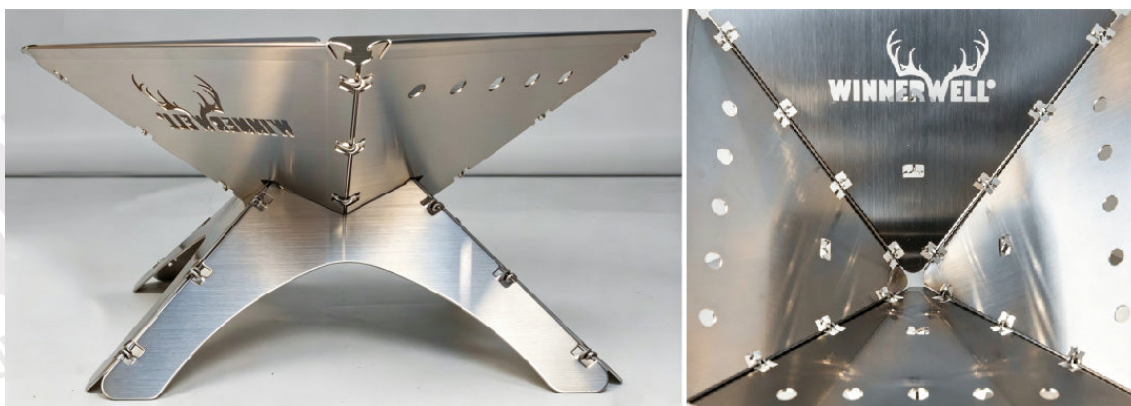

Installation of the Separately Sold Matched Grate

Install one side of the grate first, then place it down into position.



The grate can be used as a single grate, or as a double-grate configuration depending on cooking needs.



Demo of 1 grate



Demo of 2 grates

Precautions for Use

Please read the "Precautions for Use" in this manual carefully and fully understand it before use. Please keep this paper properly for the convenience of reading before each use.

This product will definitely get deformed and discolored after use. The deformation and discoloration caused by heating are **not** within the scope of warranty.

WARNING

For Outdoor Recreational Use Only. It may cause carbon monoxide poisoning when using it in a narrow space or a place with poor ventilation; it may also cause fire, oxygen deficiency, etc.

Notice

- Please use it in a place more than 60 cm away from inflammable materials and with no items above.
- Please use it on a flat place. Skew of the product may cause scalding.
- There is a risk of scalding caused by pot utensils slipping when using the product with the cooker support.
- Charcoal or wood must be used only inside this product, otherwise it may damage the ground and cause scalding or fire.
- Please wear fire-resistant gloves when operating this product, and use a wood clip to prevent scalding.
- Do not move it when it is burning.
- This product will reach very high temperatures when in use; it may cause scalding by touching it.
- Do not allow children to use it alone. Adults should always check and make sure it is safe.
- Do not place items exceeding the load bearing of this product. Please pay attention to balance when placing items.

Fire Extinguishing

- Please burn the fuel completely after use, and clean the ashes after the fire is extinguished.
- Please do not spill water during burning. Water vapor may cause scalding and deformation of utensils.
- * Please note that the grass or lawn may be scorched if using it on the grass.
- * Please wear gloves when assembling to prevent possible injuries.

Source: winnerwell.com/pages/manual-flat-firepit — converted for offline reference.