

Winnerwell® Secondary Combustion Portable Grill Firepit

Instruction Manual

SKU: 910251

Name: Winnerwell® Secondary Combustion Portable Grill Firepit

Material: AISI304 Stainless Steel (grill firepit set) / Polyester (container bag)


Stowed Dimension: 325 x 315 x 145 mm / 12.8 x 12.4 x 5.7 in

Assembly Dimension: 355 x 318 x 385–495 mm / 14 x 12.5 x 15.2–19.5 in

Net Weight: approx. 6.7 kg / 14.8 lbs




Load Bearing: Firepit 15 kg / 33.1 lbs • Grill platform 8 kg / 17.6 lbs

Contains: 1x Firepit, 1x Grill Frame, 2x Grill Net, 1x Grate, 1x Container Bag

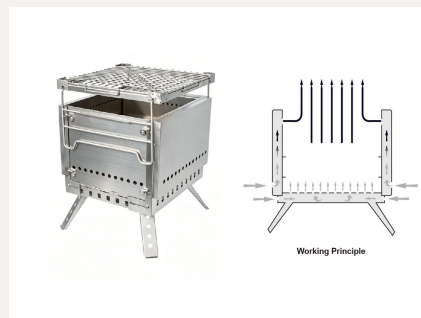

Assembly Instructions

Part Details

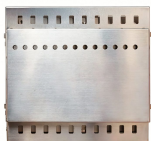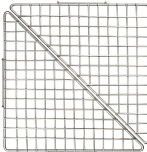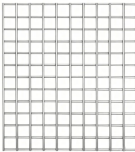				
1x Firepit	1x Grill Frame	2x Grill Net	1x Grate	1x Container Bag

- Check if there are missing, damaged or abnormal parts.
- Always remember to wear gloves when assembling to prevent injury.

1. Unfold the legs and stand the firepit



2. Assemble the main body



3. Install the internal grate

The grate can be installed at **2 positions** to meet your different demands.



Demonstration of the grate at different positions



It's a full set of firepit now — you can get your fire started!

4. Assemble the grill frame and the grill nets



5. Install the grill platform

The grill platform can be installed at **4 positions** to meet your different demands.



Demonstration of the grill platform at different positions



The grill net(s) can be removed to make it easy to feed wood/charcoal when cooking.

6. The grill platform can be used separately

Lock both sides of the grill.







Grill platform standing separately



As a table or shelf

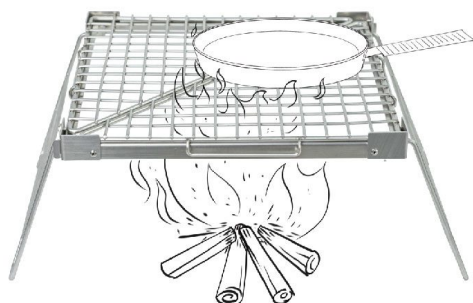

With other heat sources

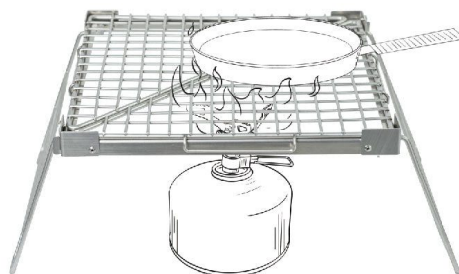

With a gas burner

Optional: Extension Legs

If you want to increase the height of the firepit set, you can purchase the Winnerwell® Extension Legs for Nomad M & L and Grill Firepit (SKU 910389) separately.



Extension Legs (SKU 910389)



Installing the extension legs



Standard height



After increasing the height

Disassembly Instructions

1. Fold the side with the Winnerwell® logo first, twist the fasteners in the direction shown, then fold the opposite side.



2. Fold the side with the shorter slot first, then fold the opposite side.



3. Fold the legs to complete the disassembly of the main body.



Notices

When you light up the fuel, secondary combustion will not occur immediately. After about 10–20 minutes of burning, the double-wall airflow within the unit will achieve full efficiency. Control the wood load at the position of the higher grate rack and get the temperature of the flames around the top air holes to reach 550–650°C (1000–1200°F); the secondary combustion dancing flames will then occur. The more evenly your fire burns inside the firepit, the more prominent the flame pattern showing the secondary combustion will appear.

- Use clean, dry, hard woods for the best results.
- Overfilling the firepit above the top air holes will decrease efficiency and will produce more smoke.
- Stainless steel has an increased resistance to rust; however, it is not rust-proof.
- Due to extremely high temperatures, deformation and discoloration of the firepit will occur, which is considered normal.
- Due to extremely high temperatures, the inside of the firepit may show signs of staining or rust, which is normal and will not affect normal use.
- Store your firepit in a cool and dry location. Prolonged exposure to a harsh environment will increase rust and discoloration.

User Warnings

Serious injury, death and/or property damage may occur if the below instructions are not followed exactly.

- The Winnerwell® Firepit is for outdoor recreational use ONLY and should not be used in a residential dwelling, a garage, or any other enclosed area.
- Always use the firepit in accordance with all applicable local, state and national codes.
- The firepit will be extremely hot during use. Never attempt to touch or move your firepit until all fire, coals and ashes are completely cooled.
- Do not remove any coals or ash, or clean the firepit, until the coals and ash are completely extinguished and the unit has completely cooled.
- Always wear heat-resistant gloves and exercise caution when operating the firepit to prevent injuries.
- The firepit is not a toy. It is not intended for use by children under 16 years of age. Careful supervision of children and pets is mandatory when operating the firepit.
- Never leave the firepit burning unattended.
- Do not use the firepit near automobiles, trucks, vans or recreational vehicles.
- The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to operate the firepit safely.
- Do not alter or modify the firepit in any manner.
- Always use the firepit on a level, non-combustible surface. Use on wood or composite decks may cause fire, property damage or even personal injury.

- Do not use the firepit under any overhead or near any unprotected combustible constructions. Avoid using under or near any overhanging trees or shrubs.
- Do not use gasoline, kerosene, diesel fuel, lighter fluid, alcohol or any other flammable liquid to light or relight the firepit.
- Do not store or use gasoline or any other flammable liquids or vapors in the vicinity of the firepit.
- Do not wear flammable or loose clothing when operating the firepit.
- Do not use the firepit in windy conditions.
- Keep all electrical cords away from the firepit.
- Do not lean over the firepit when lighting or when it is in use.
- Avoid breathing smoke from the fire and avoid getting smoke in your eyes.
- Do not use water to extinguish the fire, as this could cause damage to the firepit as well as injury to the user.
- The firepit should be inspected and cleaned regularly after each use.
- After a period of non-use, check the firepit for signs of damage and creosote buildup. Do not operate until necessary repairs and/or cleanup are done.

Storage & Maintenance

Maintaining your firepit correctly will prolong its look and usability.

- After each use, wait until the unit has completely cooled down, then turn the firepit over to empty any remaining ash. If you want to wipe it down, use only a dry cloth.
- Prolonged exposure to moisture may result in increased staining or rust.
- Always place your firepit in its container bag and store it in a cool and dry location.

Source: winnerwell.com/pages/manual-secondary-combustion-portable-grill-firepit — converted for offline reference.