

Winnerwell® Stove Accessories

General Instructions — Warnings for Use

Please refer to the terms of the purchased item. Read the following terms carefully and fully understand them before use. Please keep this document properly for the convenience of reading before each use.

Usage Demonstration

1. Fastfold Oven

Please wear gloves for assembly to prevent possible injury.
Please observe the thermometer to control the baking temperature.



WARNING: When cooking food in the oven, please control the temperature of the oven within the measurement range of the thermometer by adjusting the air inflow and the wood inside the firebox of the stove.

WARNING: When the oven is not in use for cooking food, it is strictly prohibited to heat up the EMPTY oven on the stove, to avoid deformation of the oven or failure of the thermometer by high temperature.

Part Details

Part Details


thermometer probe storage hole



Oven Body×1



Lid×1

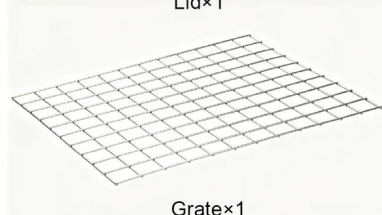

Grate×1

Assembly Instruction



Storage Status

Usage Demonstration



Use on the Wood Stove

WARNING: It is not recommended to use this oven on a gas cooker for a long time, which may shorten the service life of the bottom mesh.



Use on the Gas Stove

WARNING: It is recommended to place the oven on the firepit after the wood burns to charcoal, to prevent smoke from the burning wood pouring into the oven.



Use on the Firepit

2. Pipe Oven

Please wear gloves for assembly to prevent possible injury.
Please observe the thermometer to control the baking temperature.
The best installation position is between the 1st and the 2nd pipe sections.



WARNING: When cooking food in the oven, control the temperature within the measurement range of the thermometer by adjusting the air inflow and the wood inside the firebox.

WARNING: When the oven is used on the stove, pegs are a must to fix the stove legs to the ground, to reinforce stability and avoid the risk of the stove toppling.

WARNING: When the oven is not in use for cooking food, it is strongly recommended to remove the oven door to ensure sufficient heat dissipation inside the oven.

WARNING: When meat or other greasy food is cooked, it is recommended to wrap it with tin foil to avoid grease splashing onto the inner wall or door of the oven, which is hard to clean.



Usage Demonstration

3. Water Tank

Please wear gloves for assembly to prevent possible injury.
Strictly prohibited to heat up water with an EMPTY Water Tank.
Please be aware of possible scalds as the spigot gets hot (M/L only).
Please check and confirm if the spigot leaks before use (M/L only).
Please tighten the nut inside the Water Tank if the spigot leaks (M/L only).



WARNING: Heating an EMPTY Water Tank will deform the water tank heavily and damage the spigot; the water tank can no longer be used.



Note: control the water level below the handle holes.

Usage Demonstration



S-sized Water Tank



M/L-sized Water Tank



Note: there are no side or rear hooks on any Woodlander stoves, or on Nomad plus external air intake stoves.

For first time use of the water tank

Step 1: Rinse the water tank thoroughly with mild detergent and water.

Step 2: Fill the water tank with fresh water to the position underneath the handle holes.

Step 3: Boil the water and then discard it by letting it flow out through the spigot.

Step 4: Repeat steps 2 and 3 for 2-3 times.

Step 5: Start using the water tank.

4. Flashing Kit & Heat Protector Chimney

Please wear gloves for assembly to prevent possible injury. The Flashing Kit is compatible with the Winnerwell® Heat Protector Chimney only — never use it directly on any other pipes.



The Flashing Kit must be installed below the 5th row of holes of the Heat Protector Chimney. If there is an installation angle, make sure that every position of the silicone part of the Flashing Kit is below the 5th row of these holes as well. We recommend purchasing Winnerwell® Short Pipes separately for height adjustment to meet this position requirement.

WARNING: Temperature at the top part of the Heat Protector Chimney is high; the silicone part must avoid the position of the upper cooling holes.

WARNING: If using the Heat Protector Chimney at the pipe exit on the tent, make sure the minimum clearance from the top surface of the stove to combustible materials is 1500mm (60in). Please refer to the details described in the stove instruction manuals.



Usage Demonstration

5. Mesh Protector

Please wear gloves for assembly to prevent possible injury.
Make sure the wing bolts fix tightly with the chimney pipes.



This Mesh Protector can be installed at any position outside of the standard pipe to prevent the risk of accidental scalds by the hot pipe.



Usage Demonstration

Source: winnerwell.com/pages/manual-stove-accessories — converted for offline reference.