

Winnerwell® Tornado Smokeless Fire Pit

Instruction Manual



SKU: 910268

Name: Winnerwell® Tornado Smokeless Fire Pit

Material: AISI304 Stainless Steel

Stowed Dimension: 490 x 490 x 350 mm / 19.3 x 19.3 x 13.8 in

Assembly Dimension: 507 x 507 x 470 mm / 20 x 20 x 18.5 in

Net Weight: approx. 9.3 kg / 20.5 lbs

Contains: 1x Main Body, 1x Flame Ring, 1x Deflector Cap

Assembly Instructions

1. Check before assembly

Before assembly, check for any missing, damaged or abnormal parts.



1x Main Body



1x Flame Ring



1x Deflector Cap

2. Unfold the fire pit legs



3. Install the deflector cap



4. Install the flame ring



5. Usage demonstration



Precautions for Use

- Please read the "Precautions for Use" carefully and fully understand them before use.
- This product will definitely get deformed and discolored after use.
- The deformation and discoloration caused by heating are **not** within the scope of the warranty.

WARNING

For Outdoor Recreational Use Only. It may cause carbon monoxide poisoning when using it in a narrow space or a place with poor ventilation; it may also cause fire, oxygen deficiency, etc.

Notice

- Please use it in a place more than 60 cm (24 inches) away from inflammable materials and with no items above.
- Please use it on a flat place. Skew of the product may cause scalding.

- There is a risk of scalding caused by pot utensils slipping when using the product with the cooker support.
- Charcoal or wood must be used only inside this product, otherwise it may damage the ground and cause scalding or fire.
- Please wear fire-resistant gloves when operating this product, and use a wood clip to prevent scalding.
- Do not move it when it is burning.
- This product will reach very high temperatures when in use; it may cause scalding by touching it.
- Do not allow children to use it alone. Adults should always check and make sure it is safe.

Fire Extinguishing

- Please burn the fuel completely after use, and clean the ashes after the fire is extinguished.
- Please do not spill water during burning. Water vapor may cause scalding and deformation of utensils.
- Please note that the grass or lawn may be scorched if using it on the grass.
- Please wear gloves when assembling to prevent possible injuries.

Source: winnerwell.com/pages/manual-tornado-smokeless-firepit — converted for offline reference.