

Winnerwell® Woodlander External Air Wood Burning Sauna Stove

Instruction Manual



Please read this Instruction Manual carefully before use.

SKU: 910115

Name: Winnerwell® Woodlander External Air Wood Burning Sauna Stove

Material: AISI304 Stainless Steel

Model: WW-PL

Overall Assembled Dimensions: 628(L) x 500(W) x 2670(H) mm / 24.7 x 19.7 x 105.1 in

Firebox Dimensions: 440(L) x 250(W) x 240(H) mm / 17.3 x 9.8 x 9.4 in

Stove Stowed Dimensions: 600(L) x 315(W) x 320(H) mm / 23.6 x 12.4 x 12.6 in

Packed Dimensions: 825(L) x 300(W) x 350(H) mm / 32.5 x 11.8 x 13.8 in


Drip Tray Dimensions: 358(L) x 250(W) x 20(H) mm / 14.1 x 9.8 x 0.8 in

Rock Basket Assembled Dimensions: 471(L) x 413(W) x 190(H) mm / 18.5 x 16.3 x 7.5 in


Net Weight: approx. 21.8 kg / 48 lb

Part Details


Please check all parts before assembly. If there are missing or damaged parts, please contact the seller.

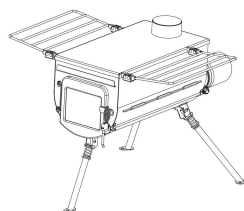

Sauna Stove x1

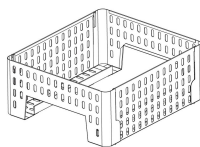

Rock Basket x1

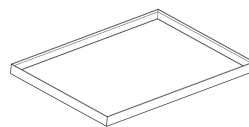

Drip Tray x1



Carrying Bag x1


Rock Basket & Drip Tray Assembly Instructions

1. Install End Panels


Attach the two identical end panels to the hooks on the front and back of the stove body. Since the end panels are identical, there is no need to distinguish between front and back.




2. Install Side Panels

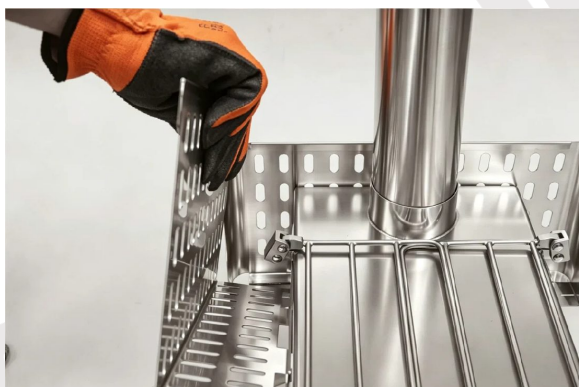


Align the bottom hole of the side panel with the hook on the side of the stove body.

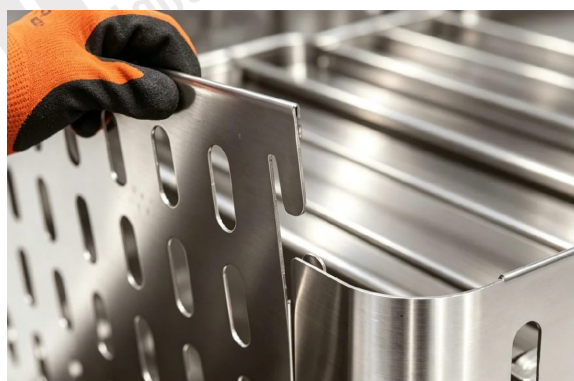

Align the tab at each end of the side panel with the corresponding hook on the end panels.

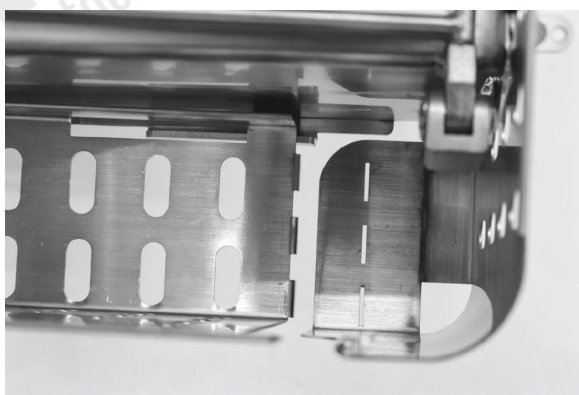


Secure the three bottom tabs of the side panel into the holes on the end panels.

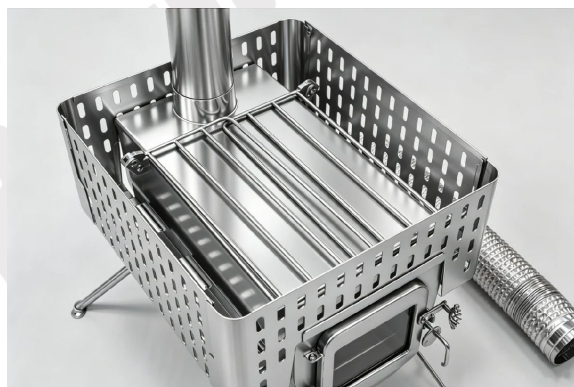

The rock basket is fully assembled.

3. Install Drip Tray

Unfold the stove handle and place the drip tray on the top surface of the stove body. The drip tray is designed to catch splashes when water is poured over the sauna stones, preventing water from spilling onto the floor.

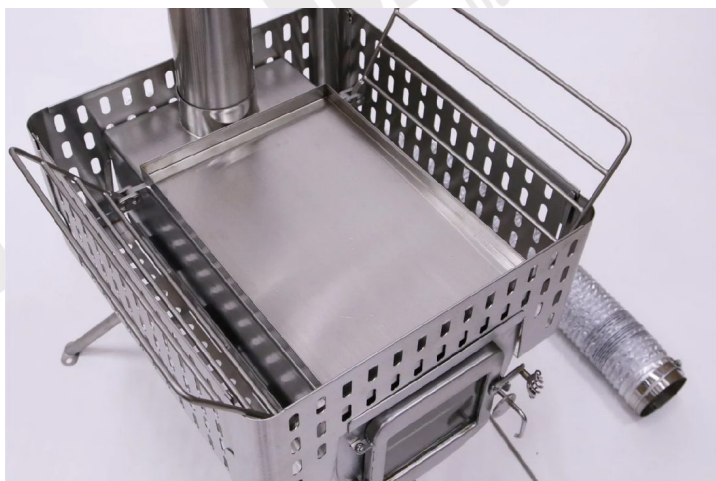

Sauna Stove Stone Placement Guide

WARNING: Only use sauna stones specifically designed for sauna stoves. Using other types of stones may contain moisture, which can cause expansion or cracking, creating safety hazards.



Round stones on stove sides and top surface

Place stones along the sides and a single layer on the top surface, approx. 20kg / 44.1lb (approx. 76 stones total)



Round stones in the drip tray only

Place two layers of round sauna stones in the drip tray, approx. 13kg / 28.7lb (approx. 48 stones total)



Irregular-shaped stones on stove sides and top surface

Place stones along the sides and a single layer on the top surface, approx. 20kg / 44.1lb



Irregular-shaped stones in the drip tray only

Place irregular-shaped sauna stones in the drip tray, approx. 20kg / 44.1lb

When sauna stones are placed along the sides of the stove, they retain high temperatures, efficiently heating the sauna room and maintaining consistent warmth. Additionally, when water is poured onto the drip tray, nearby stones stay hot longer, ensuring continuous high heat.



The area near the chimney reaches higher temperatures. It is recommended to pour water onto the sauna stones located in front of the chimney.

WARNING: Do not pour water onto the front door glass, as this may cause the glass to crack.

WARNING: Do not pour water outside the drip tray area, to prevent water from dripping directly onto the floor.

Warnings & Notices

- Please read this entire manual carefully before assembling and using this stove.
 - Keep children, furniture, fixtures and all combustibles away from the stove.
 - Before use, ensure the device is free of any damage, deformation, or cracks. Do not use if any abnormalities are found. Fully understand the operating instructions before using the device.
- Always use a carbon monoxide detector when operating the stove.
 - Ventilate the area at least once every hour during use.
 - Ensure the external intake air pipe is positioned outside the tent.
 - The stove cannot be fully protected against wind, rain, or unsupervised access by children.
 - The company is not responsible for accidents caused by improper use.
 - The stove and accessories may discolor after use; this is normal and does not indicate a defect.
 - Exercise caution during assembly to avoid injury.
 - It is strongly recommended to secure the stove with pegs, guy lines, or an anti-tip kit to prevent tipping.

Source: winnerwell.com/pages/manual-woodlander-external-air-wood-burning-sauna-stove-package — converted for offline reference.